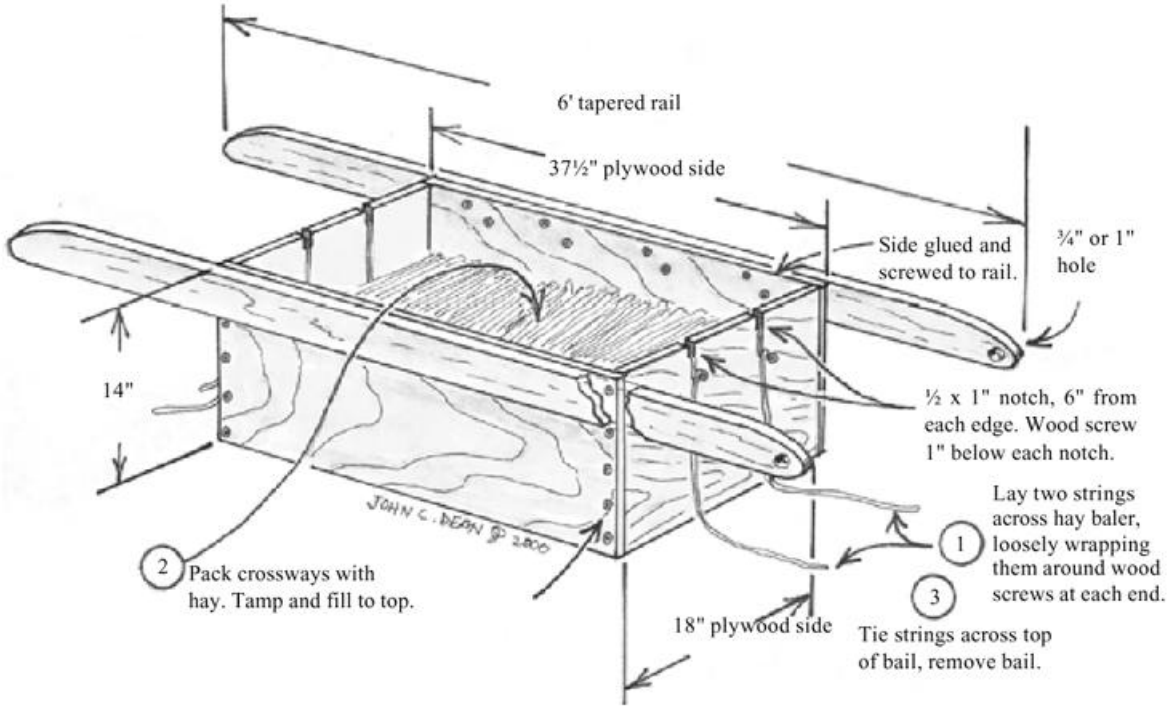
6' tapered rail
37½" plywood side
Side glued and screwed to rail.
¾" or 1" hole
14"
½ x 1" notch, 6" from each edge. Wood screw 1" below each notch.
JOHN C. DEAN © 2000
Lay two strings across hay baler, loosely wrapping them around wood screws at each end.
1
2
Pack crossways with hay. Tamp and fill to top.
3
18" plywood side
Tie strings across top of bail, remove bail.

hay baler